

4. After installing the bottom plate, pull the outside wiring into the fixture by the waterproof connector, and tighten the screws on the connector. Make wiring connections per "Electrical Connections" section and make sure the good wire protection. (Figure 4)

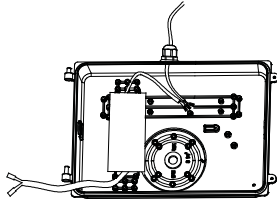


Figure 4

5. Connect the quick connect terminal, then screw the fixture with bottom plate. (Figure 5, A&B)

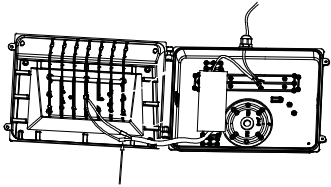


Figure 5, A

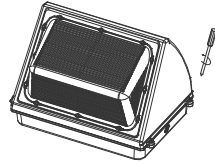


Figure 5, B

Standard wire:

L/live wire: Black\Brown;
N/null wire: White\Blue;
Ground wire: Green\Yellow-green.

Warning/Avertissement:

MIN 75 °C SUPPLY CONDUCTOR
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH
THE APPLICABLE INSTALLATION CODE BY A PERSON
FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF
THE PRODUCT AND THE HAZARDS INVOLVED.

LES FILS D'ALIMENTATION 75 °C MIN
CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE
CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE
QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT
AINSI QUE LES RISQUES INHÉRENTS.

LED Semi-Cutoff Wall Pack Light Instruction

Application :

Available in tunnel (except for motor vehicle tunnel), workshop, warehouse, factory, house, building exterior, etc.

Caution :

1. Can not use the electric generator to test the LED lamp;
2. Please abide by related country, regional and local law and regulations when install this fixture;
3. Please don't install the fixture when raining to lower the risk of electric shock and avoid the failure.

Note :

1. To avoid possibility of electrical shock or fire, the installation personnel must have professional electric knowledge;
2. Please wear gloves to avoid injury before installation;
3. If any smoke or spark of the wire happened, please turn off the power immediately and notify relevant personnel;
4. This fixture is available in outdoor usage, but the distance from fixture to ground should be more than 2m.

The installation of the product can be used when it is marked with "✓".

☑ Installation I:

1. Take out the light, and loosen the screws on the cover and take apart the fixture by the screwdriver. Pull off the quick connect terminal vigorously. (Figure1,A&B)

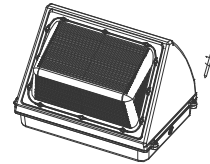


Figure 1, A

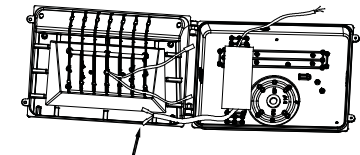


Figure 1, B

2. Drill an installation holes at the bottle of light, paste the EVA mat. (Figure2,A&B)

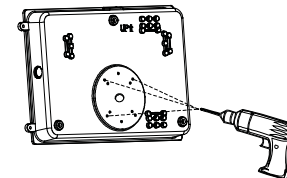


Figure 2, A

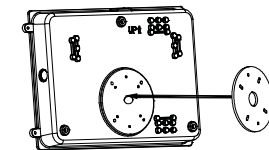


Figure 2, B